Haier

Model Number: SBEV40-3D

App Driven 5.1 Channel 40" 3D Soundbar with built-in subwoofer and iPod®,iPhone® and iPad® Dock

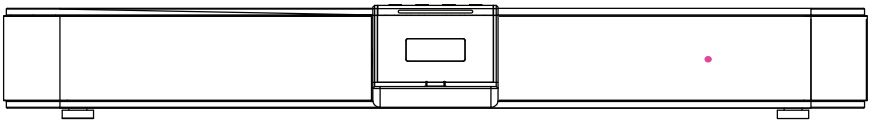

User Manual

MODEL NUMBER: SBEV40-3D

SMARTER LIFE BETTER PLANET

TABLE OF CONTENTS

PAGE

Important Saftey Instructions 2-3

Unit Features 4-5

Wall Mount 5

General Operation 6

System Settings 7

Remote Control Features 7

Quick Start Guide 8

Download APPs to the iPod/iPhone/iPad 9

Specifications 9

Limited Warranty 10

IMPORTANT SAFETY INSTRUCTIONS

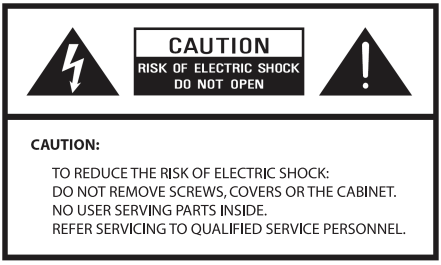
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK:
DO NOT REMOVE SCREWS, COVERS OR THE CABINET.
NO USER SERVING PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

1. Read these instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS DEVICE TO RAIN OR MOISTURE.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electrical shock, fire, etc.:

1. If you want to install this product on the wall, it must be properly installed in accordance with the installation instructions before it is used. See wall mount instructions on page 5.
2. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
3. Do not block any ventilation openings of this product.
4. The device shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the device.
5. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at any point where they exit from the device.
6. Please read Rating Labels at the back of unit for power input and other safety information.
7. Unplug your radio before cleaning or before making any repairs.
   - Note: If for any reason this product requires service, we strongly recommend that a certified technician perform the service.
8. Unplug this device during lightning storms or when unused for long periods of time.
9. Never unplug your radio by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
10. Repair or replace all electric service cords that have become frayed or otherwise damaged immediately. Do not use a cord that shows cracks or abrasion damage along its length, the plug, or the connector end.

SAVE THESE INSTRUCTIONS

- Congratulations on your purchase of our product, the latest in 3D Audio Home Theater technology.
- Please take a few moments to read this entire manual, and be sure to retain this document for future reference.
- Please read your warranty and retain your receipt and original carton for possible future use.

Note: If any part of this product is damaged or missing, please connect your dealer.

IMPORTANT

- To prevent fire or shock hazard, do not use this plug with an extension cord or other outlet unless the blades can be fully inserted to prevent blade exposure.
- To prevent fire or shock hazard, do not expose this device to rain or moisture.
- To prevent electrical shock, match wide blade plug to wide slot, fully insert.
- Do not place any heavy loads onto the unit, and do not step on it, the load may fall and cause serious injury to the unit.
- Do not attempt to carry out any service work yourself. By opening or removing the cabinet, you may be exposed to dangerous voltage or other hazards. Any service work should be carried out by qualified technicians.
- During lightning or raining days, unplug the unit for additional protection during thunderstorms or when the unit is not used for prolonged periods. This will prevent damage to the unit from lightning and power surges.

FEATURES

- Immense3D Sound experience from a single compact solution
- Simple Plug & Play setup
- Compatible with your TV, DVD, MP3 player, game console or computer
- Enjoy movies, music, and games in incredible depth and dimension with 3D sound
- Six high-efficiency drivers and two built-in subwoofers deliver an amazing audio experience
- Unique designed iPod, iPhone, iPad Docking

Thank you for purchasing our Haier product. This easy-to-use manual will guide you in getting the best use of your 3D Audio Home Theater.

Remember to record the model and serial number. They are on a label at rear of your radio.

_____
Model number

_____
Serial number

_____
Date of purchase

Staple your receipt to your manual.
You will need it to obtain warranty service.

UNIT FEATURES

Figure 1. Front unit

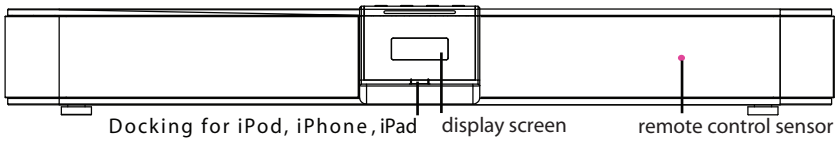

Note that Remote Control Sensor detects the controls signal from the remote control. Do not to block its direct line of sight to the remote control.

Figure 2. Key buttons on top panel

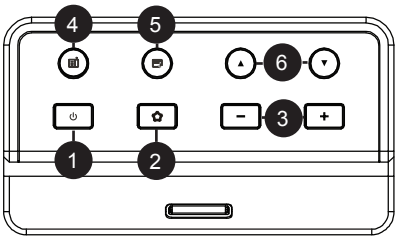

1. ⏻ Standby/on button

1.) Connect the Power Adaptor to the DC socket on the back of the unit. Then insert the Power Adaptor into the desired wall outlet.

2.) Press to switch on or off your unit.

2. ⌂ Audio button

Press repeatedly to view the audio modes: Normal, Movie and Music.

3. - Volume + Buttons

Press repeatedly to adjust volume level.

4. Source button

Press to shift to another mode, such as iPod/Line-in/Optical/Coaxial/AUX/ FM/AM.

5. MENU button

Press and hold to activate menu setting options, such as seek, clock/date, set bass, set treble, audio delay, sync iPod clock, iPod video, LCD contrast and LCD backlight.

Press to confirm an appointed option.

6. the scroll up/down ▲ or ▼ button

Press to forward or backward view options.

UNIT FEATURES

Figure 1. Key sockets on rear panel

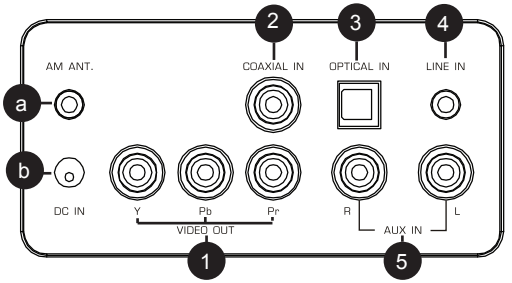

a. AM antenna socket b. Power cord socket

How to play video?

1. Connect video cables to both video out sockets of your radio and video source of your TV.
2. Press **SOURCE** to shift your radio into iPod mode.
3. Press and hold **MENU** until it goes into system setting and then press ▲ **or** ▼ to 'iPod video', press **MENU**, it will ask you 'video output on', press **MENU.**
4. Insert iPod/iPhone/iPad into the dock.
5. Shift your iPod/iPhone/iPad in movie mode, then enjoy it!

- Note: For prolong the lifespan of your radio, please use the adapter your manufacturer provided only.

1. Video out socket

2. Coaxial input socket

This socket connects to an coaxial digital cable from your TV/component device.

3. Optical input socket

This socket connects to a fiber-optic digital cable will allow outer audio equipments transmitting digital signal to your radio.

4. Line in socket

This socket allows your radio to be used as an external amplifier for MP3 players, compact disc players and similar devices.

5. Aux input socket

This input will accept stereo plugs from MP3 players, computers or TV which has RCA style jacks.

How to play 'Coaxial in'/'Optical in'/'Line in'/ 'AUX'?

- Note that technically the working principle of sockets 2-5 has no difference.

This instructional manual will demonstrate 'how to play coaxial?' as for instance.

1. Plug audio source line into 'coaxial in' socket at the back of your radio.
2. Press **SOURCE** to shift your radio into 'coaxial'mode.
3. Adjust volume level by pressing - **volume** +.

Wall Mount

These convenient keyhole slots allow you to mount your radio to the wall. Please ensure you use a drywall anchor rated for 20lbs. Each drywall anchor should be placed 16" on center apart from each other; please measure the distance of the keyhole slots on the back of your radio to ensure accuracy. The keyhole slots accommodate #9 woodscrews or equivalent.

GENERAL OPERATION

- How to play iPod/iPhone/iPad?

Note that the iPod/iPhone/iPad docking, builds in front of your radio, is compatible with all Apple iPods/iPhones/iPad.

1. Repeatedly press **SOURCE** or press the **iPad** button on your remote control to convert into iPod mode.
   Once an iPod/iPhone/iPad is docked, your radio would recharge it immediately.
   Your radio includes the Apple coprocessor so that it can play video from the latest iPod/iPhone/iPad models.
2. Press ▲ or ▼ to view , while your selecting program is showing up, trhen wait for a moment, your radio will access to the appointed program quickly.

- How to play programs through AUX IN?

Note that Aux In mode plays audio from an external source such as an MP3 player.

1. Connect the external audio source to the Aux input 3.5 mm stereo socket.
2. Repeatedly press **SOURCE** or press the **AUX** button on your remote control to convert into AUX mode, then adjust volume level is necessary.

SYSTEM SETTINGS

- How to seek?

Note: this function is uniquely designed for you to automatically pick an AM/FM program in AM or FM mode only.

1. Repeatedly press **SOURCE** to convert into AM/FM mode if current it isn't.
2. Press and hold **MENU** until it goes into system setting mode with 'SEEK' is twinkling.
3. Press **MENU** to confirm 'SEEK' , be quick.
4. Press ▲ or ▼ to downward or upward to seek programs.

- How to set preset and how to recall?

Note: this function also limited to AM/FM mode only, it has preset up to 12AM and 12FM , and this order can be only accessible through remote control.

1. While your favored AM/FM program is playing, press and hold one of preset numbers 1-12 on remote control until current program being stored.

The way of access to preset stations:

1. Repeatedly press **SOURCE** or press the **AM/FM** button on your remote control to convert into corresponding AM/FM mode.
2. Press the relevant preset number via remote control.

- How to set Bass/Treble?

Sometimes, you might thinking about set timbre level according to your personal preference, below is a shortcut of recommending you how to do it.

Press and hold **MENU** → Press ▲ or ▼ to 'Bass/Treble' → Press **MENU** to confirm → Press ▲ or ▼ to adjust the range from -10dB to 10dB, done!

SYSTEM SETTINGS

- How to set clock/date ?

1. Press and hold **MENU** ⟶ Press ▲ or ▼ to 'Clock/Date' ⟶ Press **MENU** to confirm.
2. Now hour format 'MODE : 24' is twinkling.
3. Press ▲ or ▼ to set clock mode 24/12, then press **MENU** to confirm.
4. Follow your radio's demonstration to set hour/minute/month/day/year in turn.

- How to set sync iPod clock ?

1. Press and hold **MENU** ⟶ Press ▲ or ▼ to 'sync iPod clock' ⟶ Press **MENU** to confirm.
2. Now 'SYNC: ON' is twinkling.
3. Press **MENU** to confirm.

- How to set iPod video?

Please refer 'how to play video' at P5.

- How to set LCD contrast?

1. Press and hold **MENU** ⟶ Press ▲ to 'LCD contrast' ⟶ Press **MENU** to confirm.
2. Press ▲ or ▼ buttons to your favorite option, done!

- How to set LCD backlight?

Adjusting LCD backlight can be fun when you squeeze a time to smell fresh flowers, Please refer above 'how to set LCD contrast?' to do it.

REMOTE CONTROL FEATURES

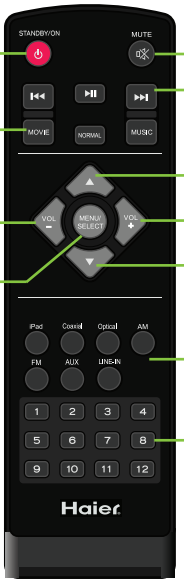

press to switch on or off your unit

press to enter corresponding Audio souce

press to decrease volume

press to activate 'select' function to confirm
press and hold to enter main menu options

press to mute your radio and
press again to have mute exit.

iPod/iPhone/iPad mode use only:
press ⏮ or ⏭ to backward or forward view tracks.
press ⏯ to pause, press again to play again.

press to forward view options

press to increase volume

press to backward view options

press to shift to corresponding mode

preset buttons
- for how to set preset and how to recall? See P6

QUICK START GUIDE

Congratulations on your purchase of Haier product SBEV40-3D------

The latest in 3D Audio Home Theater technology.

Included in box:
- 1 SBEV40-3D Sound Bar
- 1 Remote Control (Battery Included)
- 1 Product Manual (Quick Start Guide included)
- 1 Aux stereo cable

Installation Sequence

1. Connect Source
   a. A single cable is needed per source.
   b. See table below for common connection types & installation locations.
2. Plug power adaptor into rear of sound bar
3. Plug power adaptor into wall outlet
4. Press the ⏻ button to turn on
5. Press the **SOURCE** to shift to another mode
6. Adjust to desired volume by pressing the - volume + button
7. Press the **AUDIO** to adjust audio mode to best suit for source
8. Press and hold **MENU** to active main menu settings, such as set Clock/Date, etc.
9. Press ▲ or ▼ to scroll backward or forward to view options while you manange to setting menu, press **MENU** to confirm

① Compatible Sources (Only a single cable is used per source)

DOWNLOAD APPS TO THE iPod Touch/iPhone/iPad

Getting apps onto your iPod Touch/iPhone/iPad by following the below procedure.
Note that the first generation of iTouch/iPhone is not compatible with this device.

1. In your iPod Touch/iPhone/iPad's main menu, open the App Store by click the App store icon:

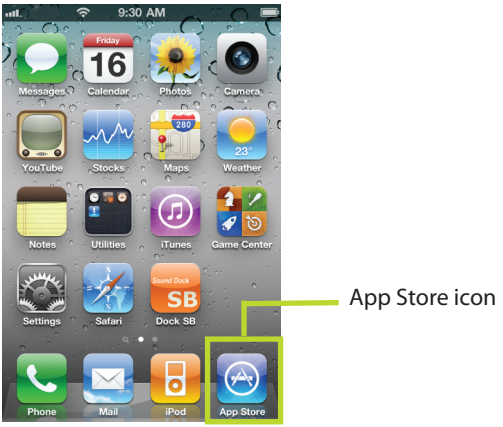

2. In the App store, search for 'Haier soundbar1'.

3. Touch 'Haier soundbar1' icon, and then hit the "free" button, it will then change the "free" to "install". Click again to install. Here is where you will enter your user name and password. You should only have to enter your username once and your iPod Touch/iPhone/iPad will remember it, but you will need to always enter a password to prevent just anyone from downloading apps to your equipment.

4. Once your iPod Touch/iPhone/iPad has started downloading the app, a status bar will show up to indicate how long it will take to download. Once it is complete, you can access your new app.

SPECIFICATIONS

- Power Supply: 100 - 240VAC, 50/60Hz
- Digital 3D Sound Processing: sonic emotion wave field synthesis
- Speakers: 6 x 3" High Efficiency Magnetically Shielded Full Range Drivers, 2 x 4" Subwoofers
- S/N: > 80dB• Distortion: < 1%
- Audio Power: 6 x 20 Watt RMS, 1 x 40 Watt RMS for dual subwoofers

LIMITED WARRANTY

This Haier brand product, when shipped in its original container will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective product with a new or remanufactured equivalent at to the purchaser, for parts or labor for the periods set forth below:

This warranty does not apply to the appearance of the product or the exterior of the product, which has been damaged or defaced, altered or modified in design or construction. It does not apply to the additional excluded items set forth below:

The warranty commences on the date the item was purchased and the original purchase receipt must be presented and the original purchase receipt must be presented to the authorized service center before warranty repairs are rendered.

The limited warranty described herein is in addition to whatever implied warranties may be granted to the purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(s) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Haier.

The warranties described herein shall be the sole and exclusive remedy available to the purchaser. Corrections of defects in the manner and for the period of time described herein, shall constitute complete fulfillment of all abilities and Responsibility of Haier to the purchaser with respect to the product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict duality or otherwise. In no event shall Haier be liable, or in any way responsible for any damages or defects in the product which were caused by repairs or attempted repairs performed by anyone other than an authorized service center or dealer; nor shall Haier be liable, or in any way responsible for incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so that above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Warranty period for this product: 1 year parts and labor.

Additional items excluded from warranty coverage: non-rechargeable batteries. Where to obtain service: For the location of the nearest Haier authorized service center or to obtain product literature, accessories, supplies or customer assistance, please call 1-877-337-3639.

What to do to obtain service: ship or carry in your product to an authorized service dealer or center. Be sure to have proof of purchase. If you ship the product, be sure it is packaged carefully.

Haier America
New York, NY 10018

IMPORTANT

Do Not Return This Product To The Store

If you have a problem with this product, please contact the "Haier Customer Satisfaction Center" at 1-877-337-3639.

DATED PROOF OF PURCHASE, MODEL # AND SERIAL # REQUIRED FOR WARRANTY SERVICE

Made in China

Haier®

Haier America
New York, NY 10018

Printed in China

Model Number: SBEV40-3D
Issued January 2012
©2012 Haier America Trading, LLC.